




A copy of FMV LOOX User Manual can be downloaded at our website: https://www.fmworld.net/overseas/sg/support/


(Pictures shown are for illustration purpose only and may look different from the actual unit.) B6FK-8011-01EN

# 1 Unpacking Your FMV LOOX Package

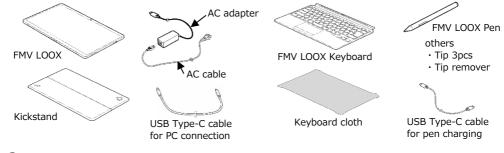
 
# 2 Connecting the AC Adapter


Be sure to connect in this order.



- 1. Connect the AC cable to the AC adapter.
- 2. Plug the AC adapter into and AC electrical outlet. (See Figure above).
- Plug the DC output cable into the Type-C of your FMV LOOX.When the battery is being charged, the Battery Charging Indicator turns on.

NOTE: The Lithium ion battery is not charged upon purchase. Initial charging time can be up to 3 hours. We recommend the battery be fully charged before use.

# 3 Powering Up Your FMV LOOX

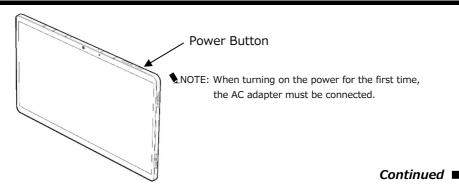

#### 4 Ports



# 5 FMV LOOX Keyboard/FMV LOOX Pen/Kickstand

See the User Manual for how to use the FMV LOOX Keyboard, FMV LOOX Pen, and Kickstand.



# 6 Support and Services Contact

Warranty, Registration, Support, Download Website:

### https://www.fmworld.net/overseas/sg/support/

You should have the following information ready so that the customer support representative can provide you with the fastest possible solution:

- Product name
- Product serial number
- Purchase date
- Conditions under which the problem occurred
- Any error messages that have occurred
- Hardware configuration
- Type of device connected, if any

See the Label on the bottom of your FMV LOOX for Product name and serial number.

### **∅** IMPORTANT

This product is equipped with an OLED display. Image sticking may occur if the same display continues for a long time. This is not a malfunction. Please refer to the User Manual for details.